



## **OPERATION OF THE MMD REVERSE GEAR**

Make sure your engine is warm prior operating reverse gear.

- Transmission must be in neutral
- Pull in the clutch,
- Pull up the reverse gear lever without hesitation,
- release the clutch lever carefully
- twist the throttle to move in reverse.

A tip on how to operate the reverse gear smoothly:

- Transmission must be in neutral
- Pull in the clutch and engage first gear

Keep the clutch lever pulled in put the transmission in neutral and immediately pull up the reverse gear lever,

Release the clutch lever gradually, twist the throttle and move in reverse carefully.

Warning:

- Engaging the reverse gear while the engine is revving high may cause damage to the reverse gear!
- Do not use the reverse gear as a parking brake
- MMD is not responsible any damages due to misuse or wrong installation